

232 Lutron	Measurement	system							
Setup( <u>S</u> )	Monitor( <u>M</u> )	Report( <u>R</u> )	About( <u>H</u> )						
						U		10	ו
	The	e A	rt of	Me	easu	irer	ner	nt	
Exit	on Measurer ) Monitor m Setup te New Data	nent systen (M) Rep (File	n ort( <u>R</u> ) About( <u>H</u>	)					
Setup (S Syste Crea Exit	m Setup te New Data	(M) Repo	コロ( <u>K</u> ) ADOUU( <u>H</u> 入 志行母曲 会また言	,	Ŧ				

點選 System Setup 進入軟體參數設定畫面

軟體參數設定

<sup>rstem Setup</sup> Systen	n Setup
System Scan Rate	Text Display Type 4 Display 💌
(1-3600 Sec) Max Record Data 1000	Angular Display Type 1 Display
Comm. Port 3	
COM Port Detect	<ul> <li>Normal Meter</li> <li>Special Meter</li> </ul>
Save	Exit

1.System Scan Rate - 設定取樣時間(1秒~3600秒)

2.Max Record Data - 設定最大記錄筆數,最大 65000筆

3.Comm. Port - 設定連結埠位置(可點選 COM Port Detect 查詢連結埠位置)

- 4.電腦傳輸速率 baud rate 設定
- 5.初始顯示畫面數設定

Chart Display 紀錄圖、Text Display 數字電表、Angular Display 類比電表 6.儀表種類設定

Normal Meter 一般 LUTRON 標準儀表, Special Meter 特殊儀表

## 使用 USB 介面時確認 com port 位置

1.進入裝置管理員

控制台>系統管理工具>電腦管理>裝置管理員

2.查看電腦 com port 位置

	- D ×
檔案④ 執行(▲) 檢視(♥) 説明(出)	
⊡	<b></b>
□	
□ 🔁 🔁 IDE ATA/ATAPI 控制器	
□ 田····································	
□ ● ● 音双,視訊及遊戲控制器	
□□□□□	
□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□	
□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	
USB Serial Port (COM 3)	
J 通訊連接埠 (COM1)	
→ J 通訊連接埠 (COM2)	
□ ① 滑鼠及其他指標裝置	
📗 🖳 電腦	
□ 🕀 👮 監視器	
□ → 磁碟機	
□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□	
- 🚌 TeamViewer VPN Adapter	
VIA Compatable Fast Ethernet Adapter	
□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	