# 2 WIRES **PRESSURE TRANSMITTER** Model : TR-PS2W-xxBAR ISO-9001, CE, IEC1010

### <u>www.yalab.com.tw</u> 02-2389-0101





- Range : 2, 5, 10, 20, 50, 100, 400 BAR.
- \* Output : 4 to 20 mA DC.
  - 4 mA = 0 pressure
  - 20 mA = full scale pressure
- \* 2 wires, both for signal and power supply.
- \* Precision ceramic type pressure sensor.
- \* External zero and span adjustment.
- \* Allow high cable load resistance, transmitter install far away from the controller/incator.
- \* Protection for the reverse wires connecting.
- \* TR-PS2W can cooperate the 4-20 mA Controller/Alarm/Indicator CT-2012

then become a pressure controller and the indicating system.

The user can control and monitor the pressure value from far away.





The Art of Measurement

## **2 WIRES PRESSURE TRANSMITTER**

Model : TR-PS2W-xxBAR

<u>www.YaLAB.com.tw</u> 02-2389-0101

#### ELECTRICAL SPECIFICATIONS (23 $\pm$ 5 $^{\circ}$ C)

Measuring range/ Model	Measuring Range	Model
	2 BAR ( 29 PSI )	TR-PS2W-2BAR
	5 BAR ( 72.5 PSI )	TR-PS2W-5BAR
	10 BAR ( 145 PSI )	TR-PS2W-10BAR
	20 BAR ( 290 PSI )	TR-PS2W-20BAR
	50 BAR ( 725 PSI )	TR-PS2W-50BAR
	100 BAR ( 1450 PSI )	TR-PS2W-100BAR
	400 BAR ( 5800 PSI )	TR-PS2W-400BAR
Output	4 - 20 mA	
	4 mA = 0 BAR	
	20 mA = Full scale pressure	
Supply voltage	DC 9V to 30 V * Protectred against reverse polarity	
Wire numbers	2 wires, bioth for signal and power supply.	
Port connector	1/4" NPT or PS 1/4", 19 teeth per inch.	
	* Inclided one adapter connector that convert the 1/4" NPT to 1/4 " PS.	
Span and Zero adjustment	Span and Zero can be adjustment by multi turns VR.	
Span	± 1 % F.S. * Within 10 $\mathcal{C}$ to 40 $\mathcal{C}$ .	
Zero	± 2 % F.S. * Within 10 $\mathcal{C}$ to 40 $\mathcal{C}$ .	
Load impedance requirement	Load up to 500 ohms.	
Operating Temperature	-20 $^\circ\!\mathrm{C}$ to 80 $^\circ\!\mathrm{C}$ ( -4 $^\circ\!\mathrm{F}$ to 176 $^\circ\!\mathrm{F}$ ).	
Operating Humidity	Less than 80% RH.	
Size	30 mm dia. x 85 mm ( 1.2 inch dia. x 3.3 inch ).	
Weight	160 g.	
Output connector	Socket	
	2 wires : Connection 1 : Power + and signal Connection 2 : Power -	

\* Appearance and specifications listed in this brochure are subject to change without notice.

TR-PS2W+0510

#### www.YaLAB.com.tw 02-2389-0101