# RESISTANCE DECADE BOXModel : RBOX-408ISO-9001, CE, IEC1010

## <u>www.yalab.com.tw</u> 02-2389-0101





Applications :

- General applications
- Troubleshooting, maintenance
- Education and Vocational training Production line testing
- Radio and TV services Working
- standards Research design & develop
- Physics laboratory work
- 1 Pocket size, offering accurate
- 2 reliable performance.
- 3 1 to 11,111,110 ohm, wide range and high resolution (1 ohm per step), practical and versatile tools.
- 4 With seven decades of resistance.
- 5 Slide switches that allow the user to simply add or subtract for desired value.
- 6 Terminals with multi way binding posts, one to switch shield case.



The Art of Measurement

## +channels VIBRATION METERS

#### Model : BVB-8207SD

<u>www.YaLAB.com.tw</u> 02-2389-0101

#### FEATURE

* Applications :
General applications
Troubleshooting, maintenance
Education and Vocational training
Production line testing
Radio and TV services
Working standards
Research design & develop
Physics laboratory work
* Pocket size, offering accurate, reliable performance.
* 1 to 11,111,110 ohm, wide range and high resolution (1 ohm per step), practical and versatile tools.
* With seven decades of resistance.
* Slide switches that allow the user to simply add or subtract for desired value.
* Terminals with multi way binding posts, one to switch shield case.

\* ABS plastic housing case, rugged components.

#### **GENERAL SPECIFICATION**

Range	1 to 11,111, 110 ohm ( 1 ohm per step )
Accuracy	1% resistors used throughout.
Wattage	1 W.
	* Do not add the voltage over AC/DC 250 V to the output resistance
	terminals even its stand Wattage is less than 1 W.
Internal Stray Resistance	0.3 ohm max.
Power Supply	None
Operating Temperature	0 to 50 $^\circ\!\mathrm{C}$ (32 to 122 $^\circ\mathrm{F}$ ).
Operating Humidity	Less than 80% RH.
Weight	320 g/0.70 lb.
Dimension	14.7 cm x 11.7 cm x 5.1 cm. ( 5.79 x 4.61 x 2.01 inch ).
Accessory Included	Operation Manual 1 PC.
Optional Accessory	Test alligator clips, one pair, TL-03

#### **OPERATION PROCEDURE**

- 1 Start with all switches up (OUT) for 0 ohms.
- 2 Switch down (IN) to add Resistance value.

\* Appearance and specifications listed in this brochure are subject to change without notice.

1805-RBOX408

### www.YaLAB.com.tw 02-2389-0101