

SD Card real time data recorder, true rms


# DCA/ACA CLAMP METER

Model : CM-6010SD

ISO-9001, CE, IEC1010

[www.yalab.com.tw](http://www.yalab.com.tw)

02-2389-0101

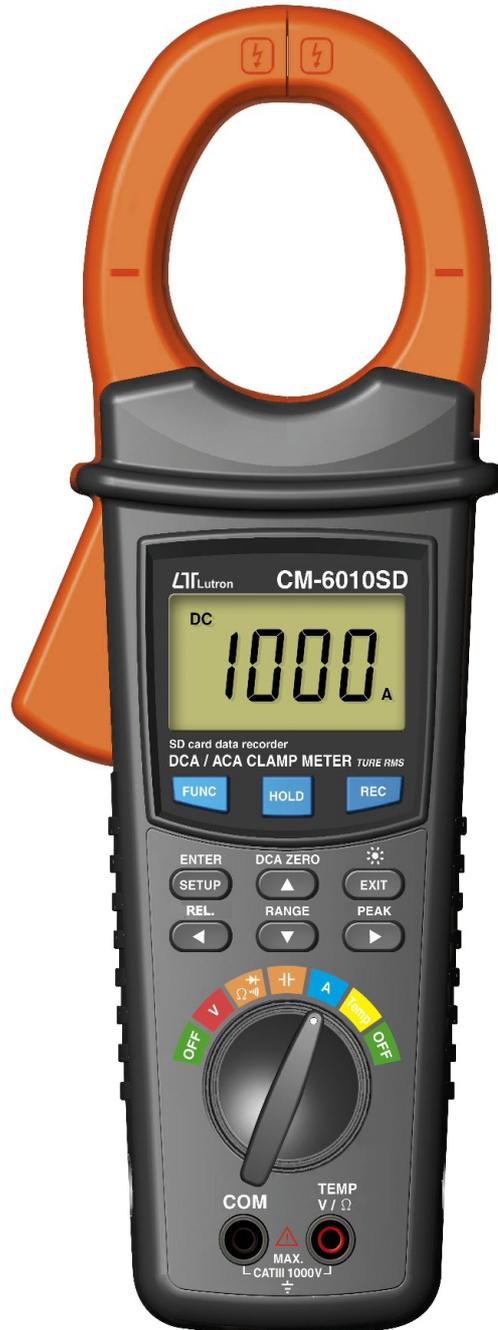

**Lutron**

[www.YaLAB.com.tw](http://www.YaLAB.com.tw)

*The Art of Measurement*

## SD card data recorder, true rms

# DCA/ACA CLAMP METER

Model : CM-6010SD

www.yalab.com.tw 02-2389-0101

### FEATURES

* Real time data logger, save the data into the micro SD memory card and can be downloaded to the Excel, extra software is noneed.
* Real time data logger, built-in clock ( year/month/date/hour minute/second ), sampling time can be set from 2 to 7200seconds.
* Measurement functions : ACA. DCA. ACV, DCV. Resistance, Diode, Continuity, Capacitance, Temp. ( optional Temp. probe )
* ACA range : 0 to 2000 ACA, auto range.
* DCA range : 0 to 2000 DCA, auto range.
* ACV range : 0 to 1000 ACV, auto range.
* DCV range : 0 to 1000 DCV, auto range.
* Resistance range : 0 to 60 Megohm, auto range.
* True rms measurement for ACV, ACA.
* CAT III 1000V, CAT IV 600V.
* DCA zero button.
* Hold, Peak ( Max., Min. measuring value ).
* 50 mm measuring conductor size.
* ACV, DCV input impedance is 10 Megohm.
* LCD with backlight.
* Micro SD memory card capacity : 1 GB to 32 GB, micro SD card.
* Powered by DC 1.5V ( UM-3/AA ) x 2 PCs batteries ( Alkaline type ) or DC 9V adapter. SD card data record function is available when the power supply is to use the DC 9V adapter.
* RS232/USB computer interface.
* Carrying case is included.
* Optional USB cable, USB-01.
* Optional data acquisition softwares, SW-U801-WIN, SW-E802.
* Optional type K Temp. probe, TP-11.

Display sampling time	Approx. 1 second.
Data Output USB/RS232	RS232 computer serial interface : * Connect the optional USB cable USB-01 will get the USB plug. * Computer interface
Operating Temp.	0 to 50°C ( 32 to 122°F ).
Operating Humidity	80% Relative Humidity max.
Power Supply	* DC 1.5V, AA ( UM-3 ) Battery x 2 PCs (Alkaline or heavy-duty battery). * AC to DC 9V power adapter ( Linear type ).
Power Consumption	34 mA DC.
Max. Conductor size	Clamp can accommodate up to 2.0" (50 mm) diameter.
Dimensions	11.0 x 4.2 x 1.9" (280 x 106 x 47mm)
Accessories Included	Instruction manual.....1 PC Test Leads.....1 Set (2 pieces) Alligator clips.....1 Set (2 pieces) Carrying case.....1 PC Micro SD card(8 GB).....1 PC AC to DC 9V adapter ( Linear type, 110 V or 220 V ).....1 PC
Optional accessories	* Type K Temp. probe, TP-11. * USB cable,USB-01. * RS232 cable,U PCB-02. * Data Acquisition software,SW-U801-WIN.

### GENERAL SPECIFICATIONS:

Circuit	Custom single-chip microprocessor LSI circuit.
Display	LCD Size: 3.2 X 2.4" (60 X 44.4 mm). Dot Matrix backlight LCD (128 X 64 pixels).
Measurements	DCV/ACV DCA/ACA Resistance/DIODE/Continuity Beeper Capacitance Frequency Temperature
A/D counts no.	6000 counts.
Voltage ranges	0.5 mV to 1000 V (DCV/ACV, Auto or Manual Range).
Current ranges	0.5 ACA to 2000 ACA (DCA/ACA, Auto or Manual Range).
Safety standard	IEC1010 CAT III 1000 V.
ACV input impedance	10M ohms.
Clamp frequency response	40 Hz to 1 KHz.
Over-load protection	DCV/ACV 1000 DCV / 1000 ACV RMS. DCA/ACA 2100 DCA/ACA with clamp probe.
Over-range	* LCD display show " OL ". * The data save into the SD card will show " 9999 " or " 999 " (overleap the decimal point).
Data Hold	Freezes displayed reading.
Data Recording	Micro SD memory card ( 1 GB to 32 GB ).
Relative measure.	To offset the measurement value.
Peak to Peak	DCV/ACV,DCA/ACA peak to peak measurement value.
DCA zero adj.	DCA zero adjustment.
Range selection	Auto range with manual range selecting.
Polarity	Automatic Switching, " - " indicates negative polarity.
Data logger	* Real time data logger, saved the data into miro SD memory card and down load the all the measured value with the information ( year/month/date/ hour/minute/second ) down load to the Excel. * Sampling time for data logger : 2 seconds to 7200 seconds. * When the system detects micro SD format does not match with the Machine that will be mandatory for reformatting to ensure that data records can be normal. * Data error no. : ≤ 0.1% no. of total saved data typically.

\* Appearance and specifications listed in this brochure are subject to change without notice.

### ELECTRICAL SPECIFICATIONS ( 23 ± 5 °C ):

#### DCV

Range	Resolution	Accuracy
600 mV /6 V/60 V/600 V /1000 V	0.1 mV /0.001V /0.01V /0.1V/1 V	600 mV ± (0.8%+2d) 6V to 1000V ± (0.8%+1d)
Peak to Peak		± (5%+30d)

#### ACV

Range	Resolution	Accuracy
600 mV /6 V/60 V/600 V /1000 V	0.1 mV /0.001V /0.01V /0.1V/1 V	± (1%+2d)
Peak to Peak		± (5%+30d)

#### DCA,ACA

Range	Resolution	Accuracy
0.5A to 2000A	0.1A/1 A	600A ± (1%+12d) 2000A ± (1%+8d)
Peak to Peak		± (5%+30d)

#### OHMS

Range	Resolution	Accuracy
600/6K/60K/600K/6M/60M	0.1Ω /0.001K/0.01K/0.1K/0.001M /0.01M	600 ohm ± (1%+2d) 6K to 60M ± (1.5%+2d)

#### DIODE

Short/non conductance, good/defect test

#### Continuity Beeper

Beeper will sound if measured resistance less than 5 ohm

#### Capacitance

Range	Resolution	Accuracy
6 nF/60 nF/600 nF/6 uF/60 uF/600 uF	0.001nF/0.01nF/0.1 nF/0.001uF/0.01uF/0.1uF	± (3%+5d)

#### Frequency(ACV > 6.5V,ACA > 15A)

Range	Resolution	Accuracy
40Hz to 999.9Hz	0.1Hz	± (0.5%+2d)

#### Type K Temperature

Range	Resolution	Accuracy
-100.0°C to 199.9°C	0.1°C	± (1%+1°C)
200°C to 1300°C	1°C	± (1%+2°C)
-148.0°F to 391.8°F	0.1°F	± (1%+1.8°F)
392°F to 2372°F	1°F	± (1%+3.6°F)

1702-CM6010SD