


DISSOLVED OXYGEN METER

Model : DO-5509

ISO-9001, CE, IEC1010

www.yalab.com.tw

02-2389-0101

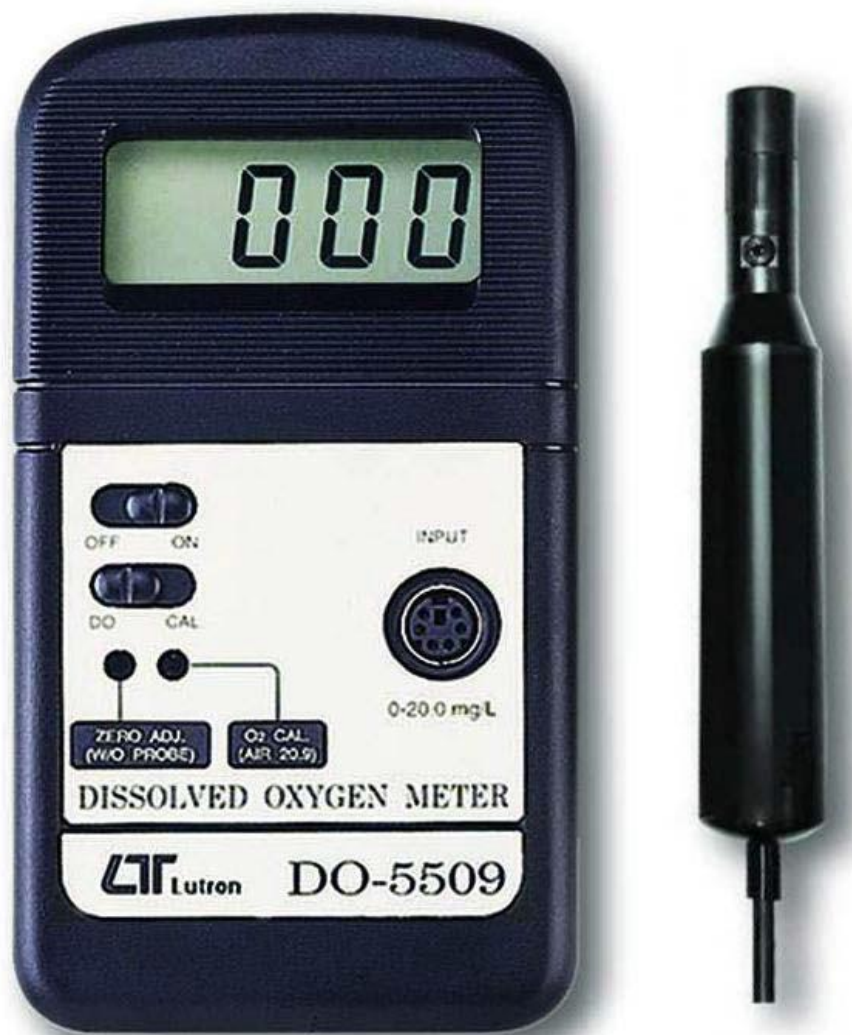

Lutron

www.YaLAB.com.tw

The Art of Measurement

DISSOLVED OXYGEN METER

Model : DO-5509

www.YaLAB.com.tw 02-2389-0101

FEATURE

This Digital Dissolved Oxygen Meter is supplied with a polarographic type probe with an incorporated Temp. sensor which serves for precise Dissolved Oxygen (DO) and Temp. measurement.

Applications for Aquarium, Medical research, Agriculture, Fish hatcheries, Laboratory, Water conditioning, Mining industry, Schools & Colleges, Quality control...

ELECTRICAL SPECIFICATIONS (23± 5 °C)

Display	13 mm (0.5") LCD, 3 1/2 digits.
Measurement Range	Dissolved Oxygen - 0 to 20.0 mg/L.
Resolution	0.1 mg/L..
Accuracy	± 0.4 mg/L. (after calibration within 23± 5 °C)
Sensor Temp. Compensation	Automatic from 0 to 40°C .
Panel adj. knob	ZERO knob, CAL knob.
Battery	006P DC 9V battery (heavy duty).
Power Consumption	Approx. DC 3.5 mA.
Operating Temp.	0 °C to 50 °C (32 °F to 122 °F).
Operating Humidity	Less than 80% RH.
Dimension	Main instrument :131 x 70 x 25 mm (5.2 x 2.8 x 1.0 inch). Oxygen probe :190 mm x 28 mm Dia. (7.5" x 1.1" Dia.) Probe cable length : 4 meters
Weight	390 g (0.86 LB) - with probe.
Accessories Included	Oxygen probe(OXPB-09N)..... 1 PC. Operation manual..... 1 PC. Spare Probe head with Diaphragm set,OXHD-04..... 2 PCs. Probe-filling Electrolyte,OXEL-03..... 1 PC.
Optional Accessories	* Oxygen probe..... OXPB-09N * Spare Probe head with Diaphragm set..... OXHD-04 * Probe-filling Electrolyte..... OXEL-03 * Hard carrying case.....CA-06

* Appearance and specifications listed in this brochure are subject to change without notice.

DO-5509+0902

www.YaLAB.com.tw 02-2389-0101